

【Inquiries】

AsahiKASEI Engineering Plastics Information Comprehensive Site
URL : <https://www.asahi-kasei-plastics.com/en/contact/>

AsahiKASEI



TENAC™-C FF520

Asahi Kasei Corporation - Acetal (POM) Copolymer

Wednesday, March 20, 2024

General Information

General

Material Status	• Commercial: Active		
Availability	• Africa & Middle East • Asia Pacific	• Europe • Latin America	• North America
Features AKEP website	• Flow, High	• Viscosity, Low	
Uses	• Engineering Parts	• Gears	• Housings
Multi-Point Data	• Isothermal Stress vs. Strain (ISO 11403)		
Part Marking Code (ISO11469) (ISO 11469)	• >POM<		

Other Documentation

Literature	• Molding Conditions • Presentation • SDS • Technical Handbook
------------	---

ASTM & ISO Properties ¹

Physical	Nominal Value	Unit	Test Method
Density / Specific Gravity	1.41	g/cm ³	ASTM D792 ISO 1183
Melt Mass-Flow Rate (MFR) (190°C/2.16 kg)	120	g/10 min	ISO 1133
Molding Shrinkage - Flow	1.6 to 2.0	%	Internal Method
Water Absorption (24 hr, 23°C, 50% RH)	0.20	%	ASTM D570
Mechanical	Nominal Value	Unit	Test Method
Tensile Modulus	2840	MPa	ISO 527-1
Tensile Stress (Yield)	65.0	MPa	ISO 527-2
Nominal Tensile Strain at Break	13	%	ISO 527-2
Flexural Modulus	2810	MPa	ISO 178
Impact	Nominal Value	Unit	Test Method
Charpy Notched Impact Strength	3.0	kJ/m ²	ISO 179
Thermal	Nominal Value	Unit	Test Method
Deflection Temperature Under Load 1.8 MPa, Unannealed	100	°C	ISO 75-2/A
CLTE - Flow	1.0E-4	cm/cm/°C	ISO 11359-2

Disclaimer:

- Data shown are typical values obtained by proper testing methods and should not be used for specification purpose. Please use these data for selecting the most appropriate grade suitable for specific usage.

These data may be changed because of improvement in properties.

- Be sure to read the relevant SDS before handling and use, and always follow the Important Precautions.

- Do not use plastics in any of the following orally- or medically-related applications.

- Orally-related applications: any part, device or component which may come into direct oral contact or into direct contact with drinking foods or beverages.

For drinking water application, please consult Asahi Kasei Corporation.

- Medically-related applications: any part, device or component which may be used intracorporeally or which may in dialysis or other processes come into direct or indirect contact with body tissue, body fluids or transfusion fluids.

TENAC™-C FF520**Asahi Kasei Corporation - Acetal (POM) Copolymer****Processing Information**

Injection	Nominal Value	Unit
Drying Temperature	80 to 90	°C
Drying Time	3.0 to 4.0	hr
Processing (Melt) Temp	180 to 210	°C
Mold Temperature	> 60	°C

Disclaimer:

- Data shown are typical values obtained by proper testing methods and should not be used for specification purpose. Please use these data for selecting the most appropriate grade suitable for specific usage.

These data may be changed because of improvement in properties.

- Be sure to read the relevant SDS before handling and use, and always follow the Important Precautions.

- Do not use plastics in any of the following orally- or medically-related applications.

- Orally-related applications: any part, device or component which may come into direct oral contact or into direct contact with drinking foods or beverages.

For drinking water application, please consult Asahi Kasei Corporation.


- Medically-related applications: any part, device or component which may be used intracorporeally or which may in dialysis or other processes come into direct or indirect contact with body tissue, body fluids or transfusion fluids.

TENAC™-C FF520

Asahi Kasei Corporation - Acetal (POM) Copolymer

Curve Data

Isothermal Stress vs. Strain (ISO 11403)

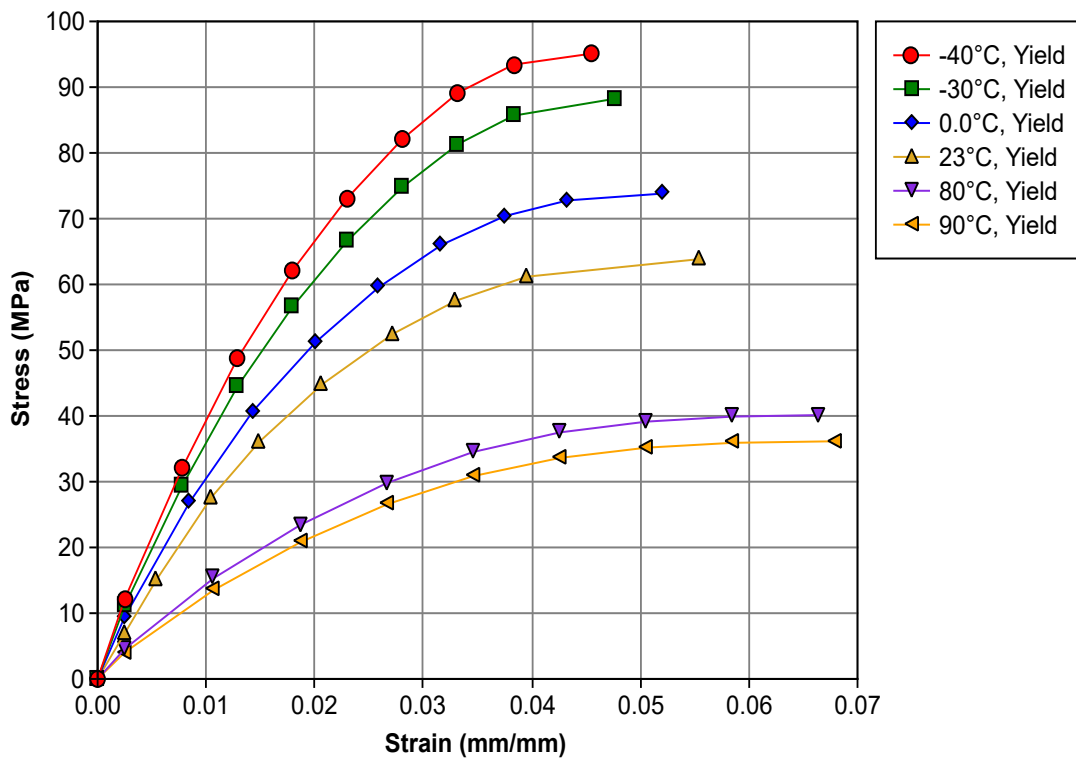

Disclaimer:

- Data shown are typical values obtained by proper testing methods and should not be used for specification purpose. Please use these data for selecting the most appropriate grade suitable for specific usage.

These data may be changed because of improvement in properties.

- Be sure to read the relevant SDS before handling and use, and always follow the Important Precautions.

- Do not use plastics in any of the following orally- or medically-related applications.

- Orally-related applications: any part, device or component which may come into direct oral contact or into direct contact with drinking foods or beverages.

For drinking water application, please consult Asahi Kasei Corporation.

- Medically-related applications: any part, device or component which may be used intracorporeally or which may in dialysis or other processes come into direct or indirect contact with body tissue, body fluids or transfusion fluids.

TENAC™-C FF520

Asahi Kasei Corporation - Acetal (POM) Copolymer

Notes

¹ Typical properties: these are not to be construed as specifications.



Disclaimer:

- Data shown are typical values obtained by proper testing methods and should not be used for specification purpose. Please use these data for selecting the most appropriate grade suitable for specific usage.

These data may be changed because of improvement in properties.

- Be sure to read the relevant SDS before handling and use, and always follow the Important Precautions.

- Do not use plastics in any of the following orally- or medically-related applications.

- Orally-related applications: any part, device or component which may come into direct oral contact or into direct contact with drinking foods or beverages.

For drinking water application, please consult Asahi Kasei Corporation.

- Medically-related applications: any part, device or component which may be used intracorporeally or which may in dialysis or other processes come into direct or indirect contact with body tissue, body fluids or transfusion fluids.